

Wall Installation - Vertical

Begin at either end of the wall surface to be covered. Start by placing the panel tongue into the starter or trim piece, attach panel to the wall with the appropriate fastener in the screw flange (Fig.22). Attach LUX screws in the centre of the screw flange while allowing the panel to float on the wall (Fig.23).



Fig.22



Fig.23

LUX panel can be installed snug to the base flashing or placed into the J channel that is installed over the base flashing (Fig.24). Continue the installation by inserting the next panel's tongue snugly into the groove of the previous panel, ensuring that it is fully seated. Continue until you reach the last piece, which may be trimmed to fit if necessary (Fig.25).



Fig.24

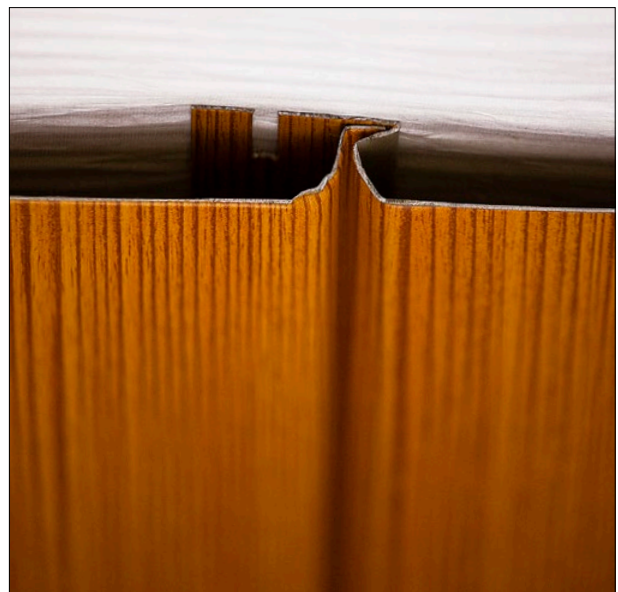


Fig.25