

## Wall Installation - Open Corners

**Open Inside Corners** - Use as an end of wall trim installed after the panel, or as a transition moulding between LUX panel and a finished wall with a different material.

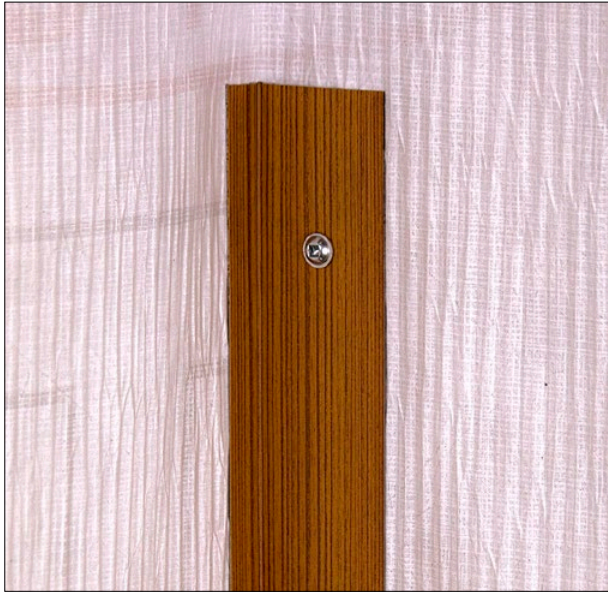


Fig.60



Fig.61

Step 1: Set the closure trim (#705) in place (Fig.60).

Step 2: Set the standard panels in place and fasten (Fig.61).

Step 3: Set the open inside corner (#712) in place and fasten (Fig.62).

Step 4: Set the standard panels in place and fasten (Fig.63).



Fig.62

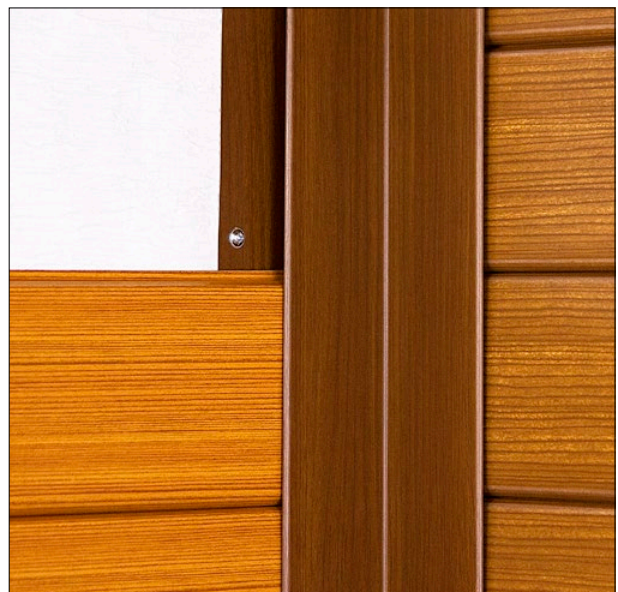


Fig.63