

## Wall Installation - Trimming Panels

**2 Piece J Channel** - The top and bottom J channel are designed to go together to finish panel sections where it is necessary to add the trim after the panels have been installed (Fig. 37).



Fig.34



Fig.35

Step 1: Install the two piece J base section as required on one side or bottom of wall (Fig.34).

Step 2: Set standard panels in place and fasten (Fig.35).

Step 3: Finish installation by installing the top cover of the two piece J (Fig.36).

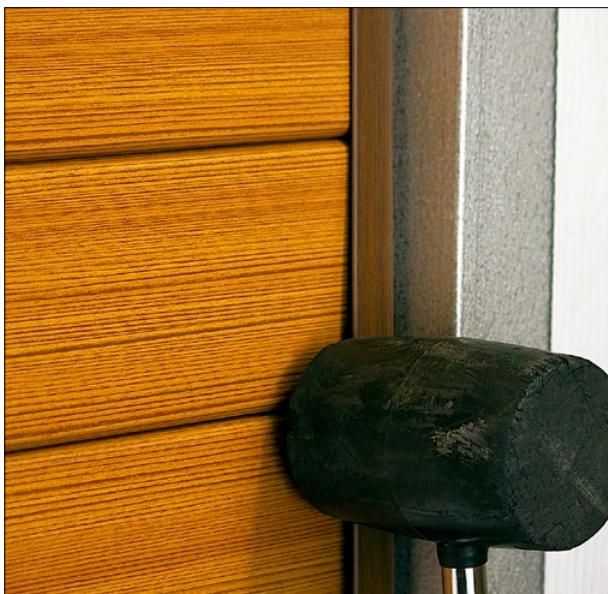


Fig.36

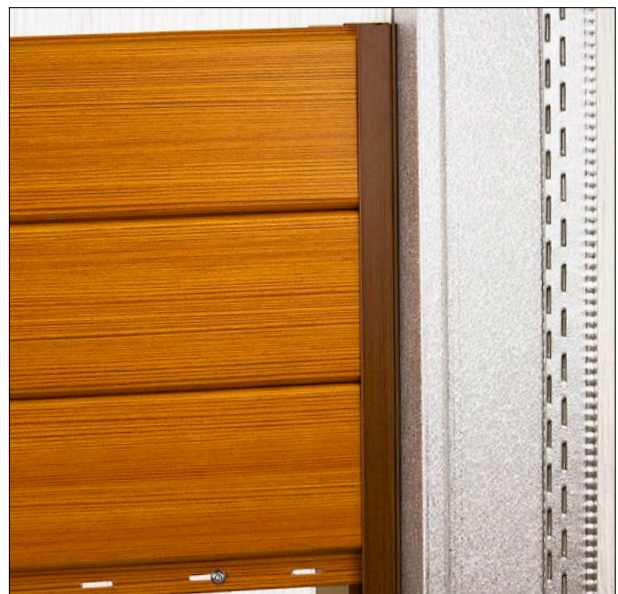


Fig.37